
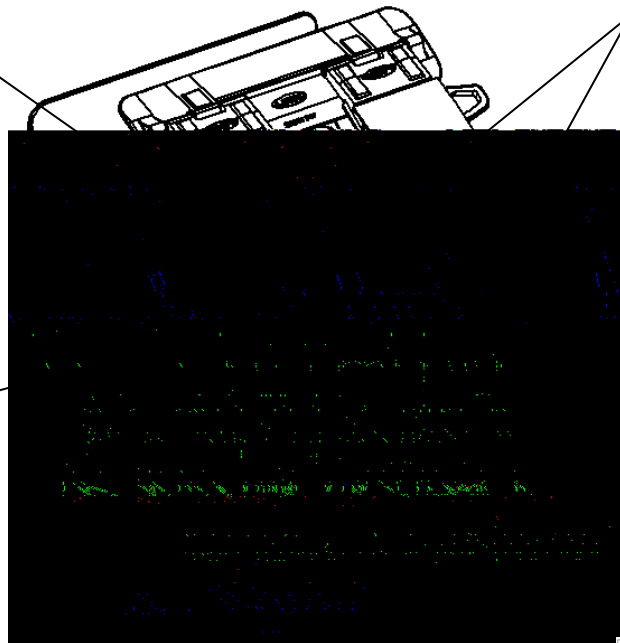


Contents

1 Safety.....	1
2 Mounting Instructions.....	6
3 Installation Methods	8
4 Operating Instructions	14
5 Maintenance and conservation	

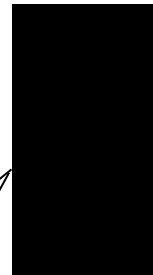

■

■

■

■

■



■ T



 Caution

Unauthorized as E ned as iillpanuai6(r)ased aseed amilloéd a7fo



■

■


■

■


■


 **Danger**

D

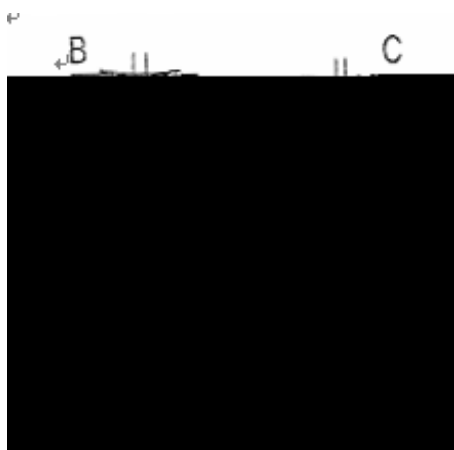


1. remove of the packaging, then lifting the truck attachments and place on the tray

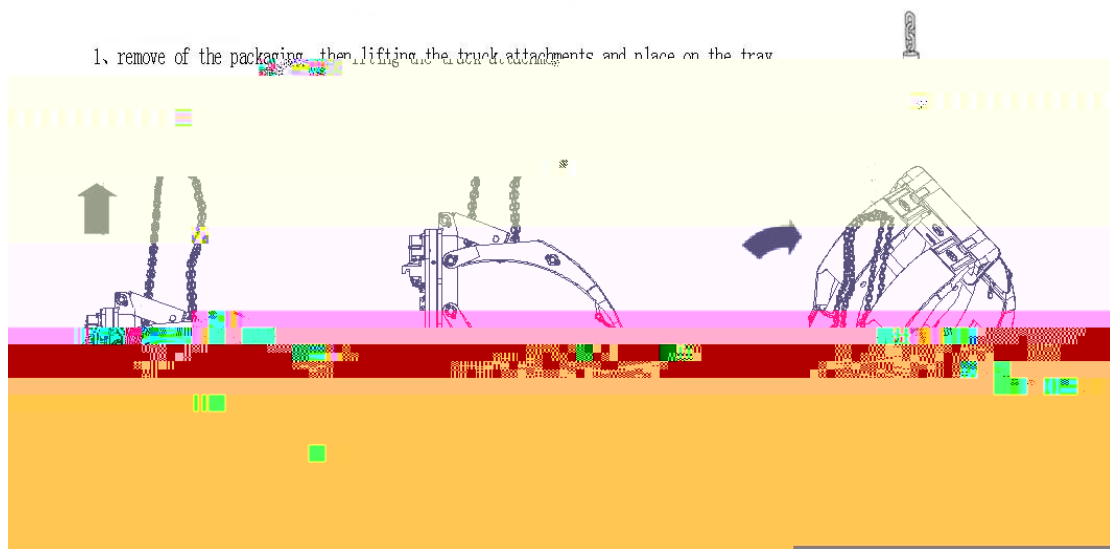

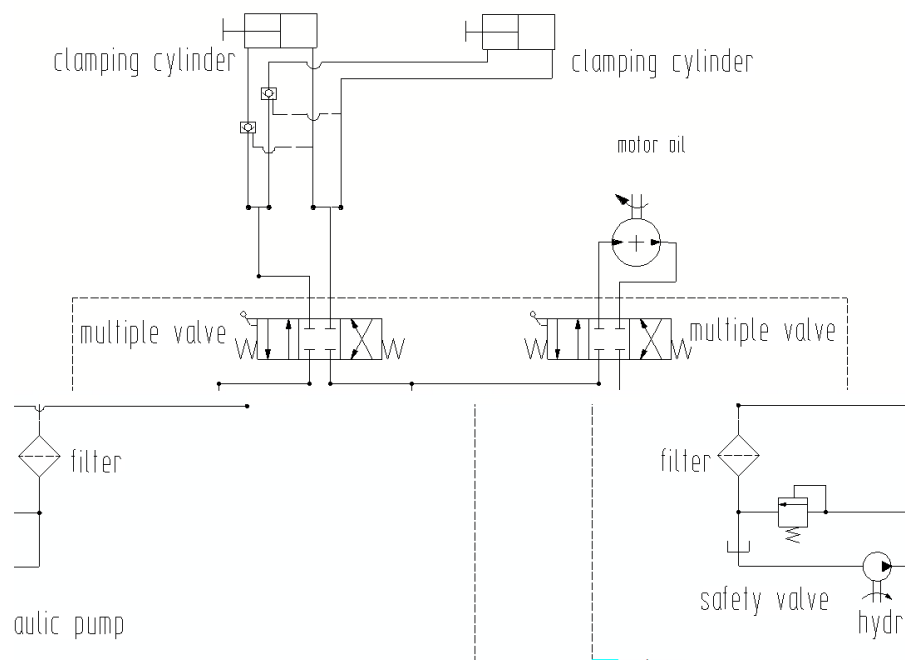

Upper hook Stopper Upper crossbeam of the forklift carriage

O

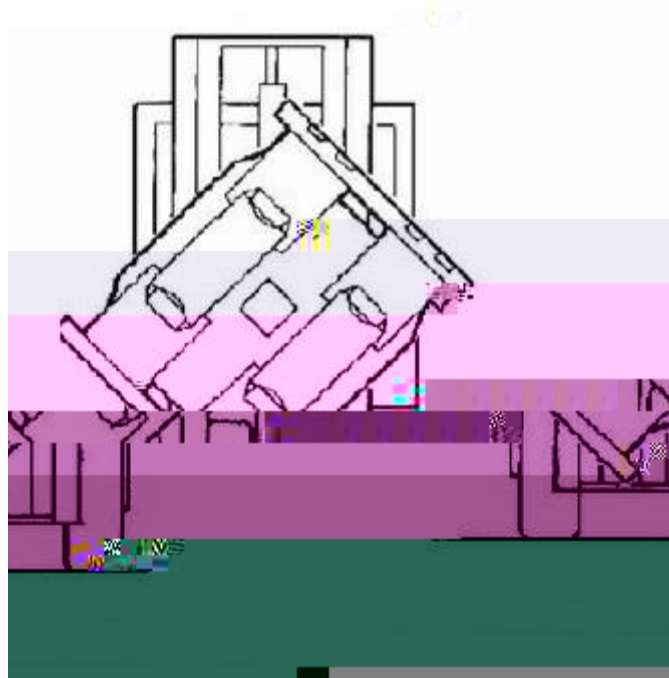

Turn to any point of 45 ° to adjust the short arm

⚠ Warning

When the clamp is mounted, first apply lubrication grease and debug the clamp under zero and small load to verify it rotates and clamps correctly. The clamp will not be used normally unless it is free of any abnormality.

--	--	--

Roll Clamp User Manual		

